

How to integrate

# Brecknell SBI240

weighing scale with  
vMeasure Parcel Ultima?





## Table Of Contents

**01**

Wire Connection

**1**

**02**

Weighing Scale Selection  
on the vMeasure Touchscreen


**2**

**03**

Calibration

**4**



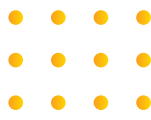


# How to integrate Brecknell SBI240 with vMeasure Parcel Ultima?

## 1 - Wire Connection



 Step 1: Connect the weighing scale to vMeasure Parcel Ultima.







## 2 - Weighing Scale Selection on the vMeasure Parcel Ultima Touchscreen





Step 2: After logging in to vMeasure Parcel Ultima, navigate to the Scale menu.

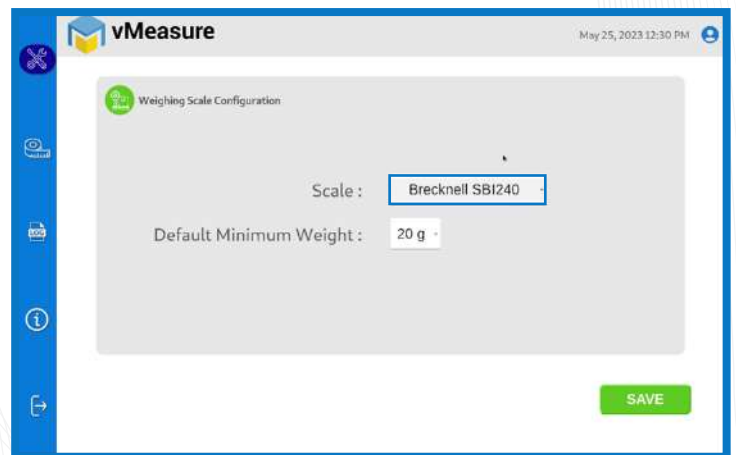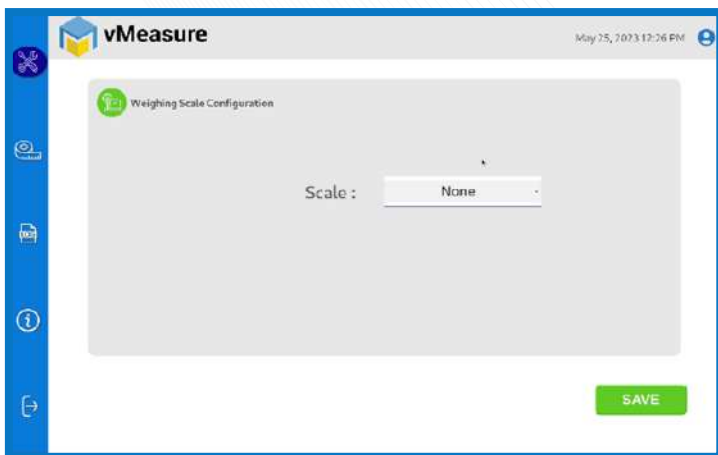

 Step 3.1: Choose **Brecknell SBI240** from the list of weighing scales.



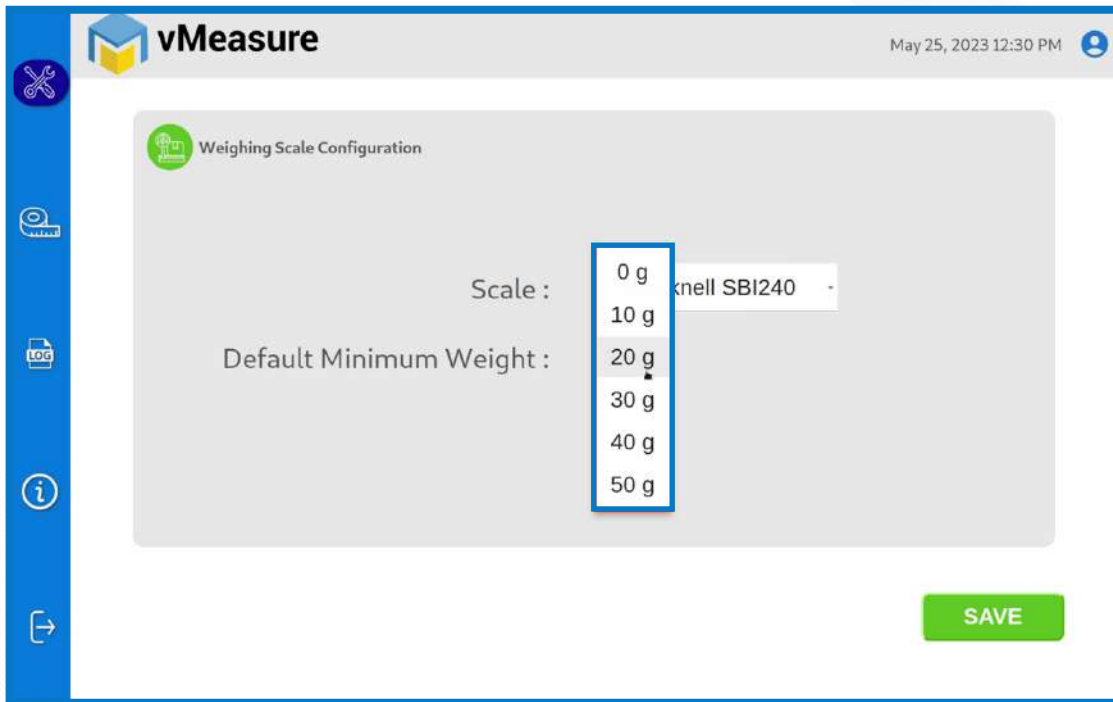


**Step 3.2: Default Minimum Weight:** Select the minimum weight that needs to be displayed by default when the actual weight of the product is very light.



Some warehouse management systems would not consider products weighing closer to zero and this setting ensures that the minimum weight requirement is maintained.


Click **save** to finish the weighing scale integration.



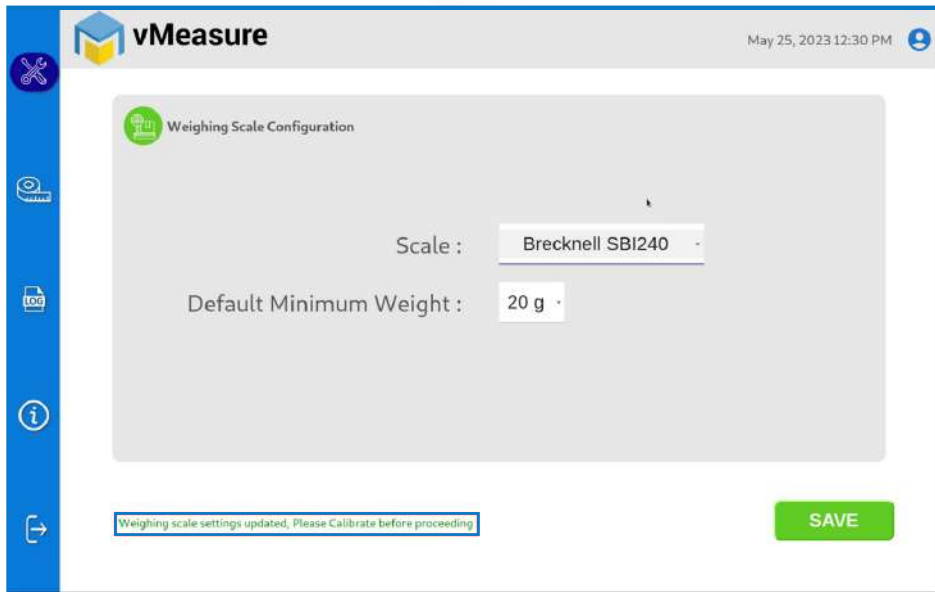


The weighing scale is successfully integrated.


### 3 - Calibration

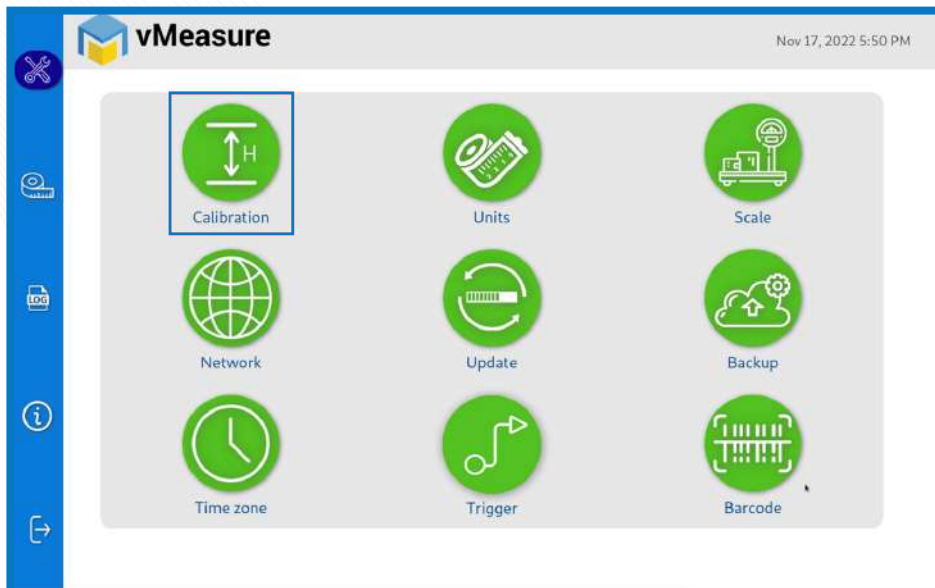

Step 4: Click on the **Calibration** menu.


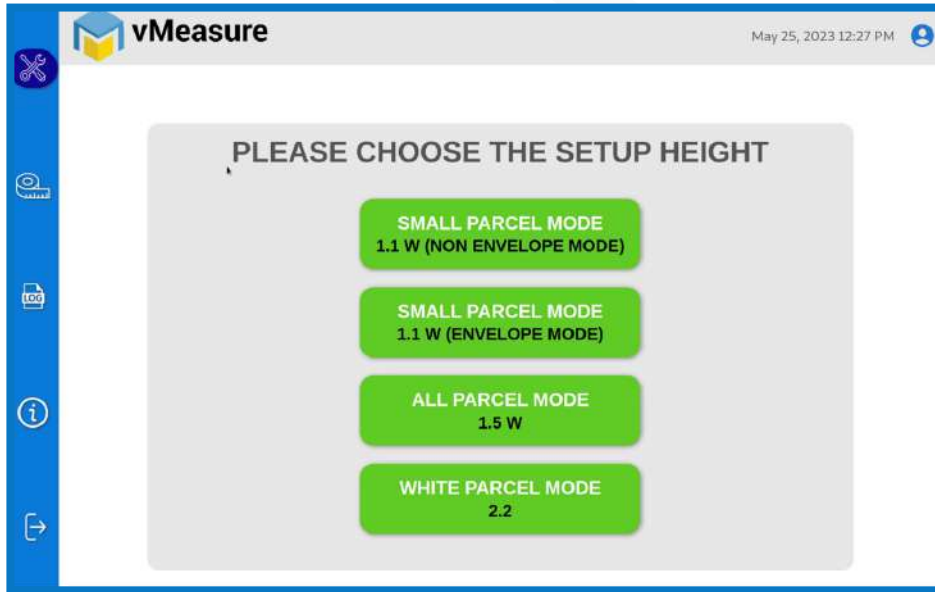


**Step 5: Select the appropriate setup height.**

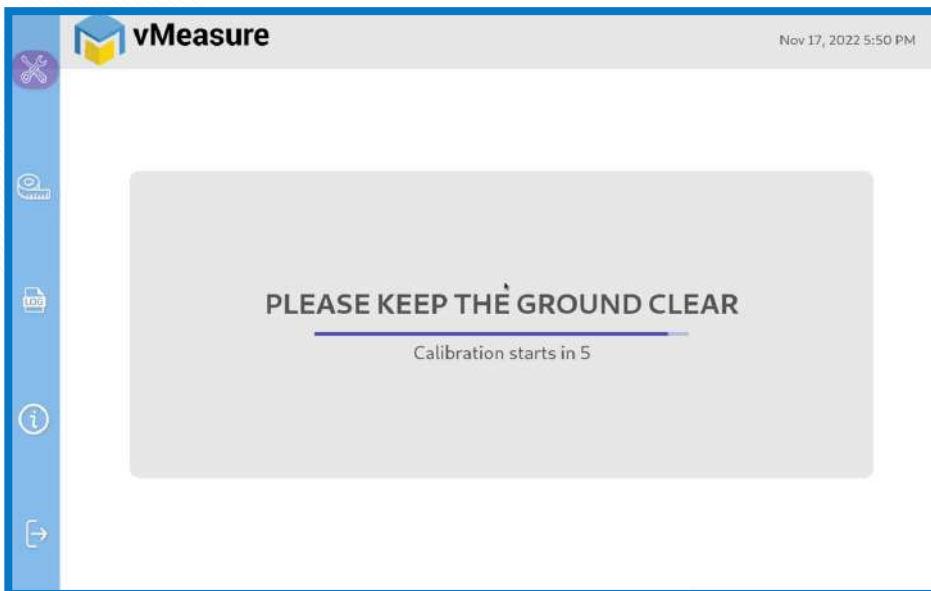

**Step 6: Wait for 5 seconds for the system to calibrate.**



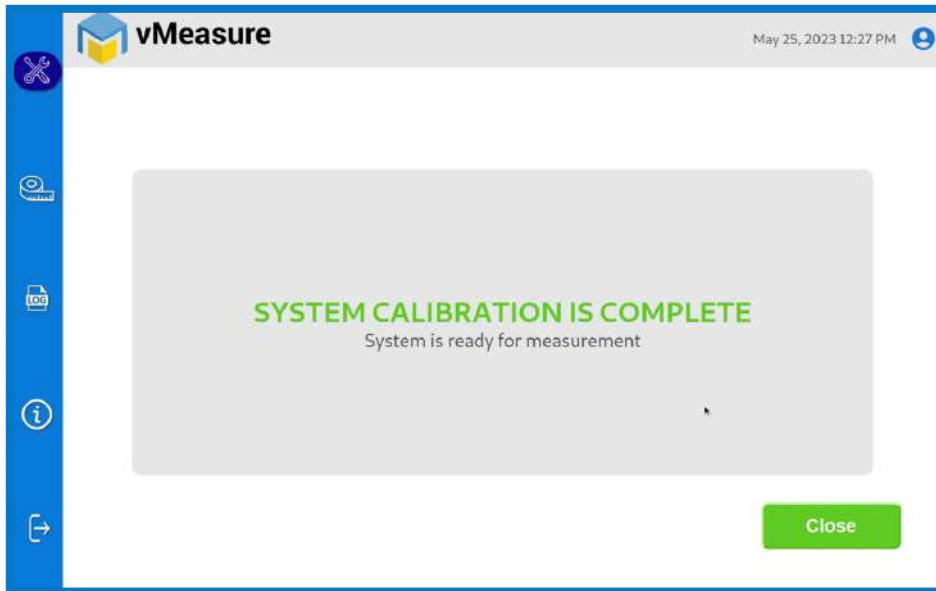 

**Step 7: Upon successful calibration, your weighing scale will be ready for use.**







# vMeasure

— PARCEL ULTIMA —

Integration with Brecknell SBI240

## Contact us



[www.vmeasure.ai](http://www.vmeasure.ai)



[vmeasure@visailabs.com](mailto:vmeasure@visailabs.com)