

How to integrate

Mettler Toledo BC30

weighing scale with
vMeasure Parcel Ultima?






Table Of Contents

01

Wire Connection

3

02

Weighing Scale Selection
on the vMeasure Touchscreen


4

03

Calibration

7












Things you need to get started:

All Mettler Toledo scales that you receive from vMeasure Parcel Ultima will be duly configured before shipment. However, if you have purchased the scale on your own, then perform the following configuration to set up the scale.

1 - Mettler Toledo Weighing Scale Settings

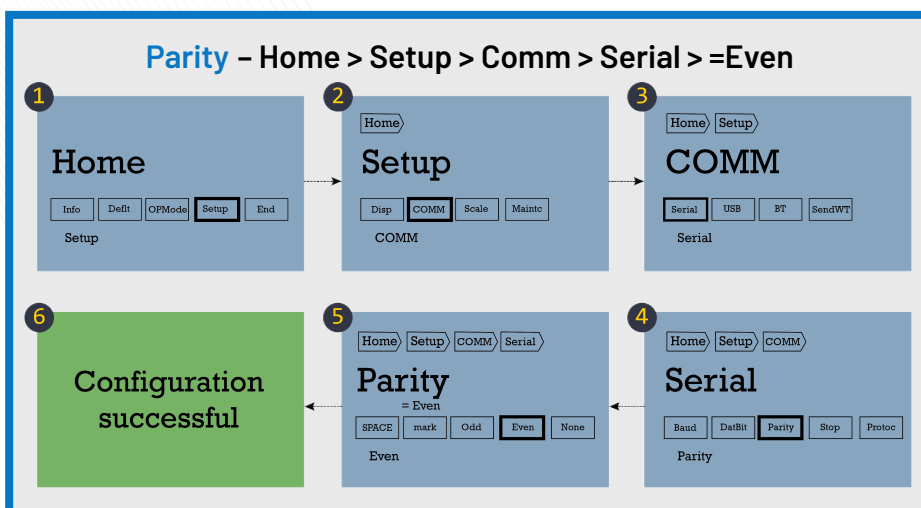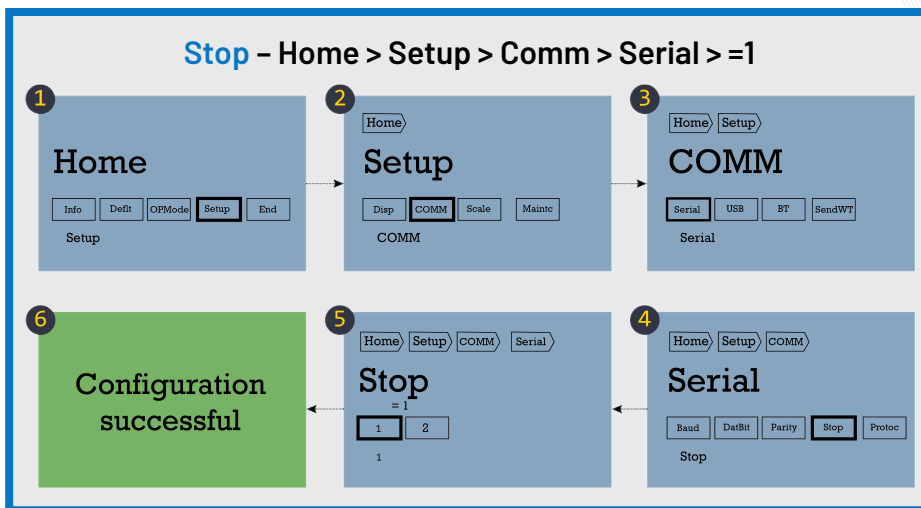

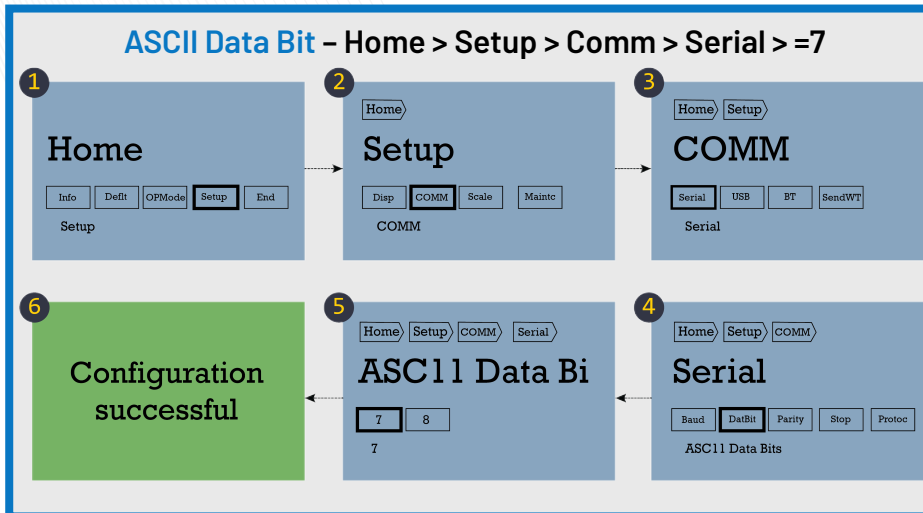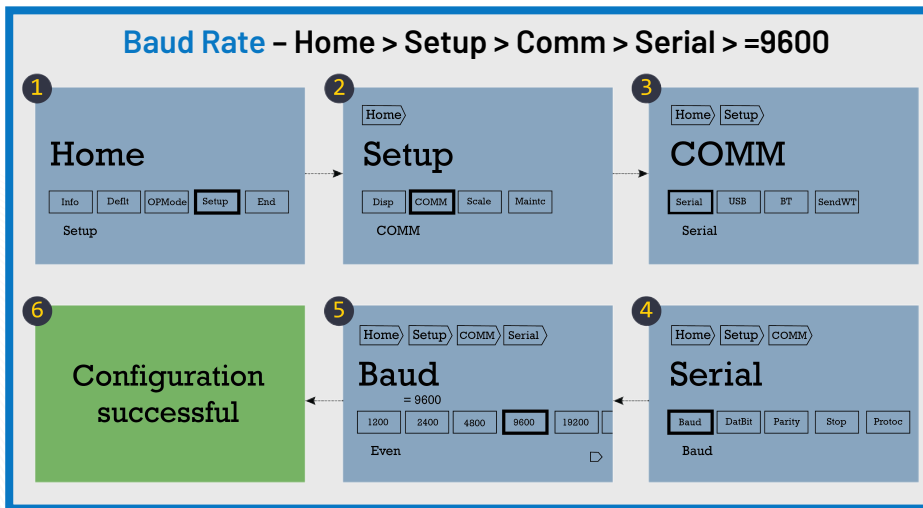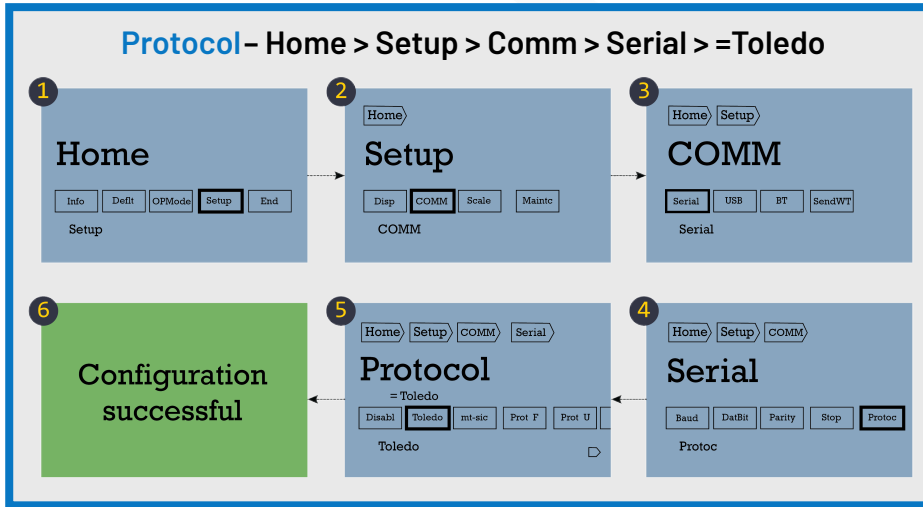



2 – Virtual USB Settings

Hold the **Up** arrow to get to the **Home** screen.

Then perform the sequence given below:

- Home > Setup > Display > Comm > USB > =Virtual Serial
- After selection, hold the **Center** button to get to the **End** screen
- End > **Save**
- You will now see a window that displays, “**Parameters save and update OK**”
- Click **Exit**



How to integrate Mettler Toledo Scale BC30 with vMeasure Parcel Ultima?

1 – Wire Connection



Step 1: Connect the weighing scale to vMeasure Parcel Ultima.







2 - Weighing Scale Selection on the vMeasure Parcel Ultima Touchscreen




Step 2: After logging in to vMeasure Parcel Ultima, navigate to the Scale menu.

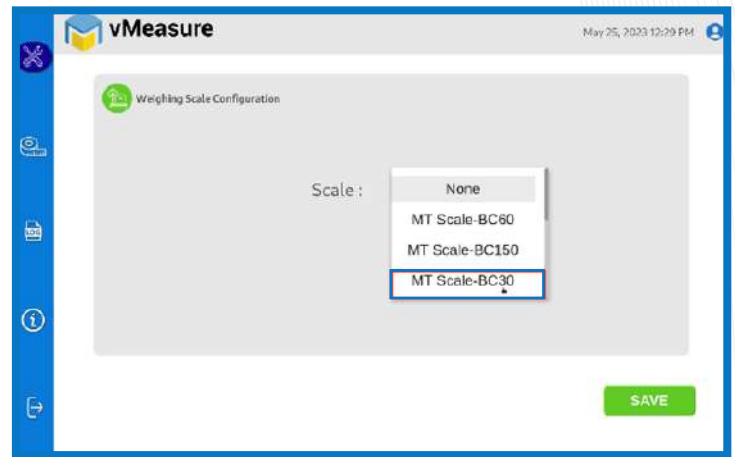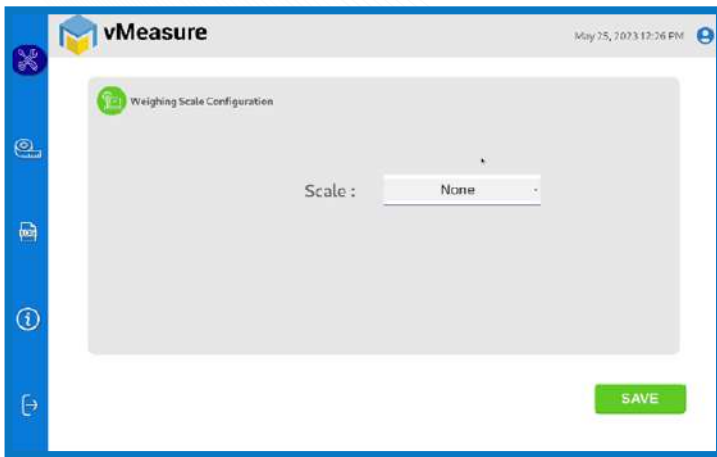


Step 3.1: Choose **MT Scale-BC30** from the list of weighing scales.



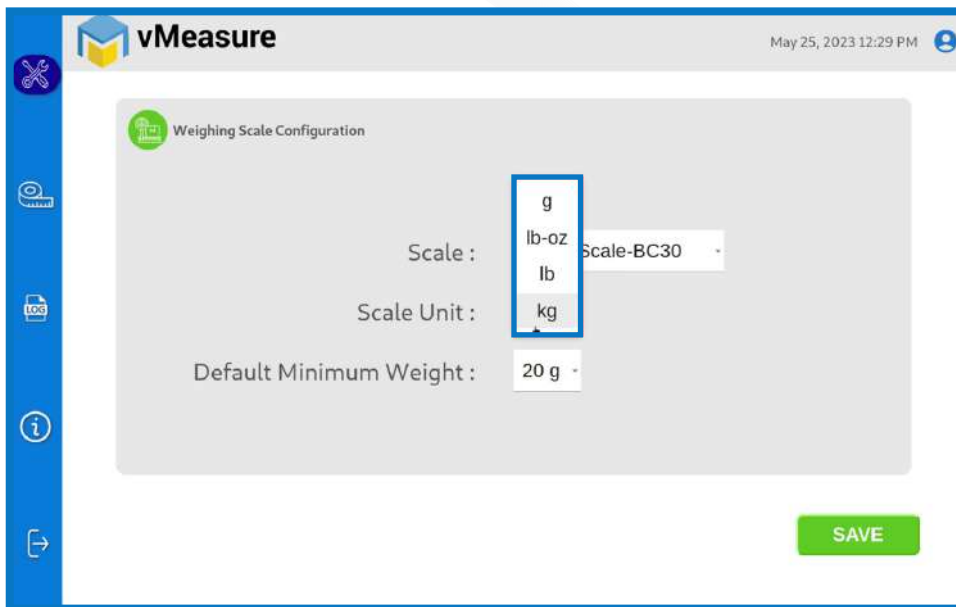


Step 3.2: **Scale Unit:** Choose the unit that is displayed on the weighing scale.

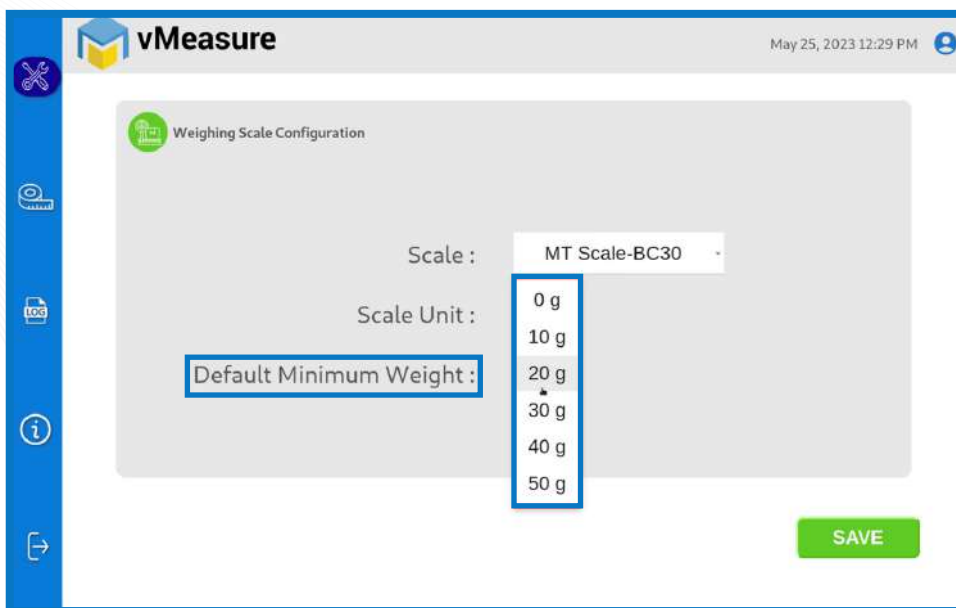


Step 3.3: **Default Minimum Weight:** Select the minimum weight that needs to be displayed by default when the actual weight of the product is very light.







Some warehouse management systems would not consider products weighing closer to zero and this setting ensures that the minimum weight requirement is maintained.

Click **save** to finish the weighing scale integration.

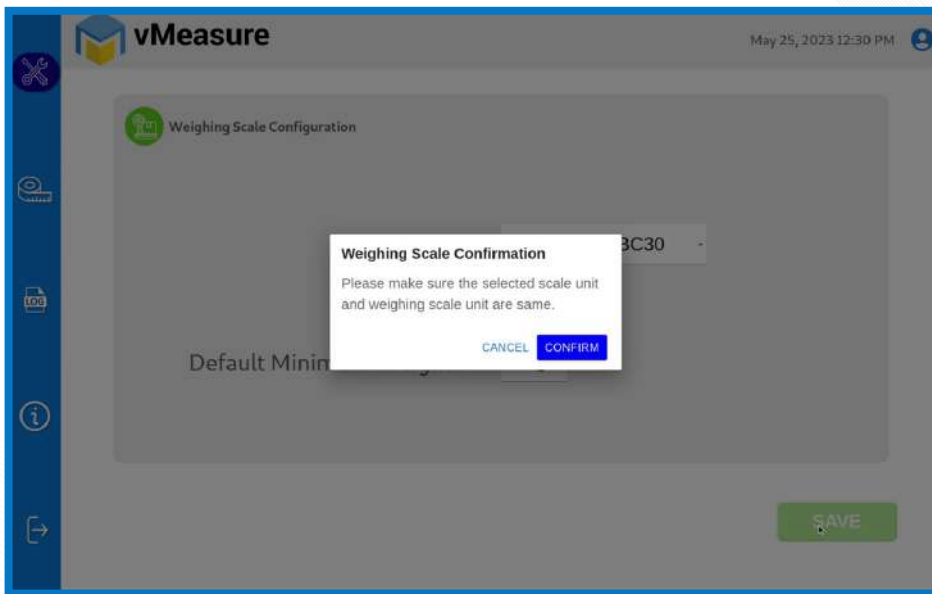


The unit selected should match with the unit configured on the weighing scale.

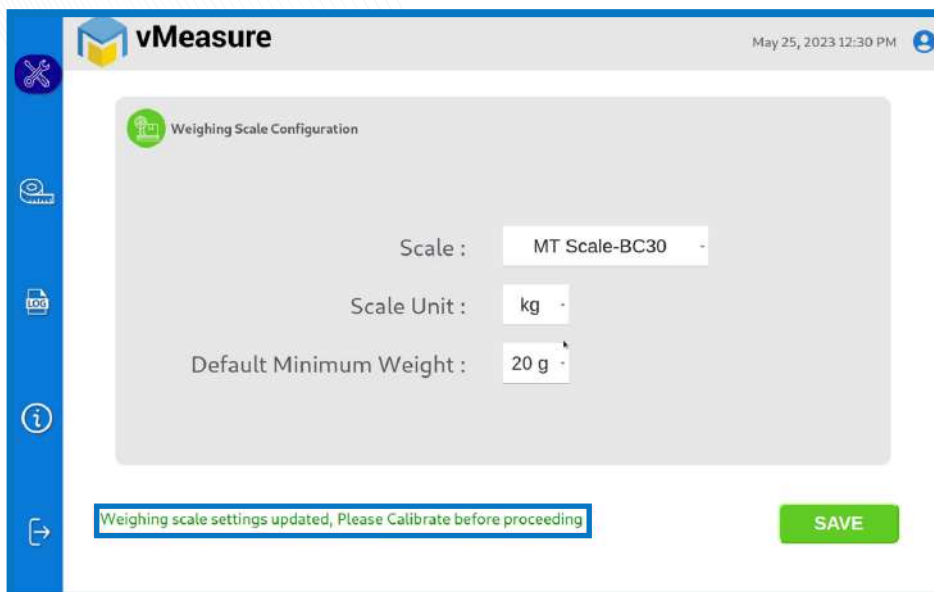




After confirming the uniformity between the unit selected on vMeasure Parcel Ultima and the unit displayed on the weighing scale, press Save to finish the weighing scale integration.


3 – Calibration

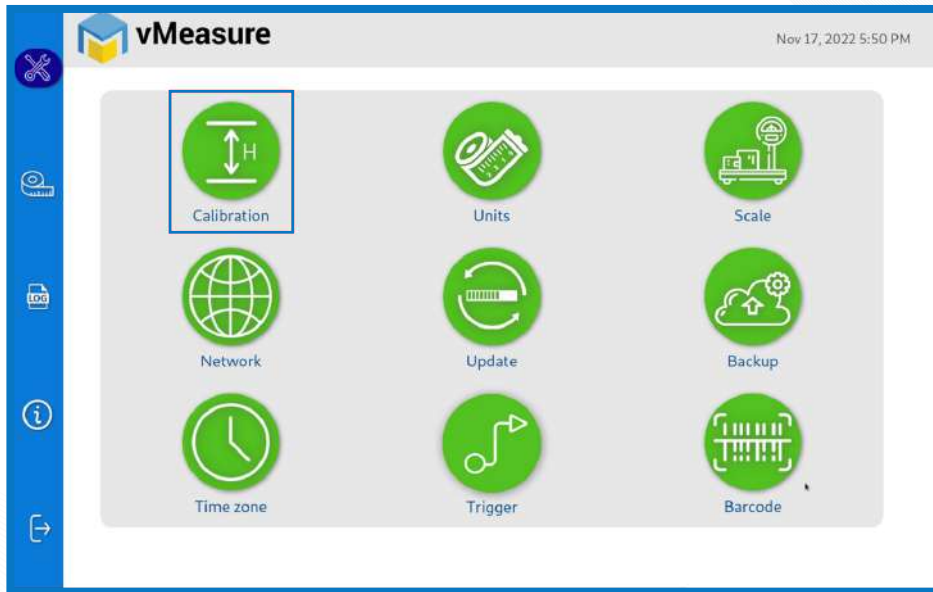


Step 4: Click on the **Calibration** menu.

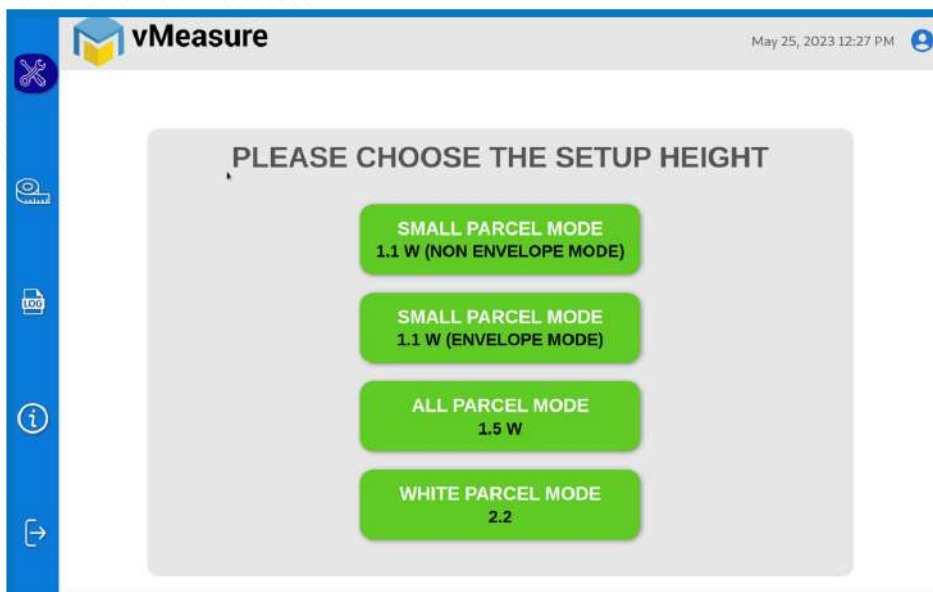

Step 5: Select the appropriate setup height.



Step 6: Wait for 5 seconds for the system to calibrate.

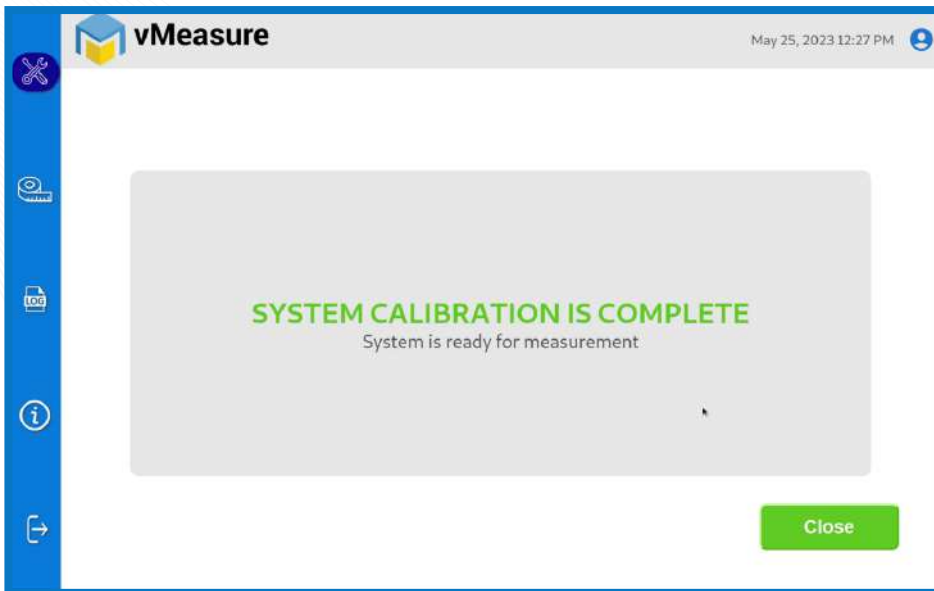

Step 7: Upon successful calibration, your weighing scale will be ready for use.





vMeasure

— PARCEL ULTIMA —

Integration with Mettler Toledo Scale BC30

Contact us



www.vmeasure.ai



vmeasure@visailabs.com